



Gas Pressure Regulator R 50

**Product information** 



ΕN

Subject to modifications! Reprint prohibited!

## **Table of Contents**

Application, Characteristics, Technical Data	4
Application	4
Characteristics	4
Type of model (Options)	4
Technical data	5
Structure and function	6
Installation example	6
Sectional view	6
Valve seat diameter, measuring unit diameter	7
Setpoint spring	7
Dimensions, Connection, and Weight	7
Dimensions and weight	7
Dimensional drawing	7
Types of Models / Options	8
Design	9
Properties of Gases	10
Order Data	11
Contact	12
Notes	14



Observe the following publications in relation to **ATTENTION** installation, start-up and maintenance: DVGW - work sheets G 491 and G 600 Operating and Maintenance Instructions R50

## List of abbreviations and formula symbols

AC	Accuracy class	PS	Maximum allowable pressure	t <sub>u</sub>	Gas inlet temperature
HDS	High-pressure spindle	$p_u$	Inlet pressure	VS	Valve seat
$K_{G}$	Valve flow rate coefficient	$Q_n$	Standard volumetric flow	$W_d$	Outlet gas
$p_d$	Outlet pressure	rate			velocity
$p_{ds}$	Setpoint of the	RE	Diaphragm assembly	$W_{u}$	Inlet gas velocity
	response pressure	SG	Closing pressure group	$\rho_{\text{n}}$	Gas density

<sup>\*)</sup> KG value for natural gas

## Application, Characteristics, Technical Data

## **Application**

Gas pressure regulator (GDR), direct-acting (operating without auxiliary power), for systems acc. to DVGW work sheet G 491 (A) and G 600 (A) (TRGI). Particularly suitable for dynamic regulation sections (e.g. natural gas supply systems, low flow regulators, gas fireplaces, burner circuits, gas motor operation). Can be used as an equipment component on gas consumption facilities as defined in EC Directive (90/396/EEC). Can be used for the gases defined in DVGW work sheet G 260 / G 262 and neutral non-aggressive gases. (other gases on request)

#### **Characteristics**

- Integral pressure-tight model (IS)
- Diaphragm assembly with internal measuring line

## Type of model (options) (see page 8)

- Oxygen model
- Hydrogen model
- Coating with epoxy resin in RAL colors

#### Technical data

Type R 50

Model Integral pressure-tight (IS)

Max. allowable pressure PS5 barMax. inlet pressure p3 bar

**Nominal width** Rp 1" (DN 25), Rp 1½" (DN 40), Rp 2" (DN 50)

(NPT thread on request)

**Type of connection** Internal thread acc. to EN 10226-1

Material

Housing / actuator housing Al - cast alloy

**Corrosivity category** DIN EN ISO 12944-2

C1 to C5-I without additional coatings

C5-M an epoxy resin coating is recommended

Temperature range, Class 2

(operating/ambient temperature)

-20°C to +60°C

Function, strength and tightness DIN EN 334

CE mark acc. to PED/ PIN number CE-0085-BR0220

**Ex protection** The mechanical parts of the device do not have any


potential ignition sources of their own and therefore do not fall within the scope

of ATEX 95 (94/9/EC). Electrical components fitted to the device

comply with the ATEX requirements.

#### Preferred installation position

The gas pressure regulators R50 shall be installed in the pipeline preferably in horizontal position. For all nominal widths, the direction of flow is indicated by an arrow on the housing.

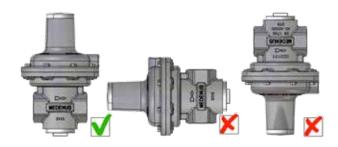

Only after consultation with Medenus GmbH

Note: Observe the following documents in relation to installation, start-up, and maintenance:

- DVGW work sheets G 491 and G 600
- Operating and Maintenance Instructions R50




#### Structure and function

The spring-loaded gas pressure regulator R 50 has the function of keeping the outlet pressure of a gaseous medium constant within permissible limit values, independently of the effect of interferences, such as e.g changes in the gas tap, in the connected regulation section on the outlet side.

Due to the absence of an intermediate diaphragm, the gas pressure regulator is not independent of upstream pressure if the inlet pressure is inconstant. The gas pressure regulator is composed of the actuator housing and the "diaphragm assembly plus actuator" functional unit.

The gas flows through the actuator housing in the direction of the arrow. The internal measurement line port is used to pass the outlet pressure to be regulated to the bottom of the main diaphragm of the diaphragm assembly. It compares the actual value with the command variable preset by the force of the setpoint spring. The setpoint required in each case is set via the setting screw. Any deviation from the setpoint is transmitted by the screw spindle to the actuator, which is adjusted such that the actual value is adjusted to the setpoint.

In case of zero tap, the actuator will close tight, causing the closing pressure to be established.

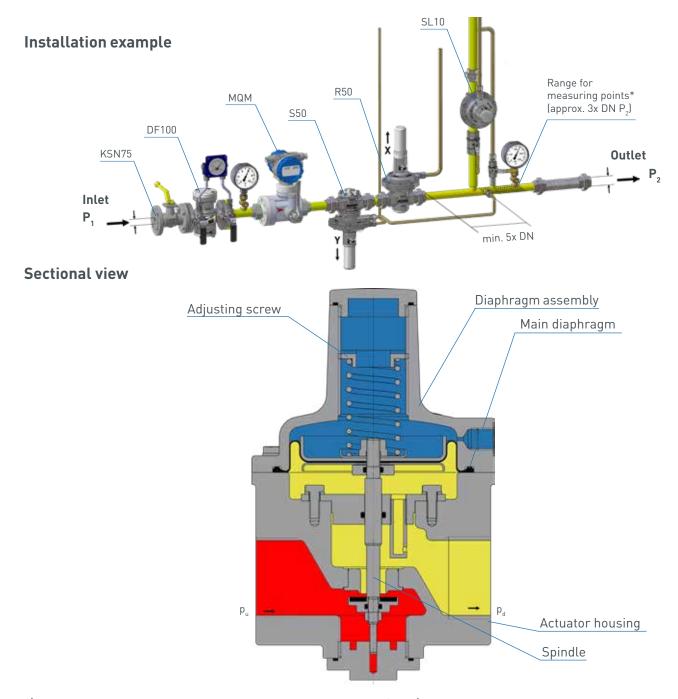

<sup>\*)</sup> Recommended max. velocity at the measurement line port 25 m/s

© 11.2023

## Valve seat diameter, measuring unit diameter

Nominal width	Connection	Valve seat Ø (mm)	Flow rate coefficient  K <sub>G</sub> * [(m³/(h*bar)]	Diaphragm assembly
	Rp 1	11.0 / 15.0 / 20.0	70/120/200	160
	Rp 1½	15.0 / 25.0	120/380	160
	Rp 2	15.0 / 25.0	120/380	160

## **Setpoint spring**

#### Note


The setpoint spring ranges for the gas pressure regulator R 50 depend on the initial pressure. For more detailed information, please contact the company MEDENUS Gas-Druckregeltechnik GmbH. The contact data are given on page 11.

## Dimensions, Connection, and Weight

## Dimensions and weight

W	minal idth DN	Connection	Ø (mm)	A (mm)	B (mm)	L (mm)	HD2 (mm)	X (mm)	Weight (kg)	Weight HD2 (kg)
	25	Rp 1	145	173	53	100	112	180	2.5	0.4
	40	Rp 1½	145	173	61	140	112	180	3.5	0.4
	50	Rp 2	145	173	61	160	112	180	3.5	0.4

## **Dimensional drawing**

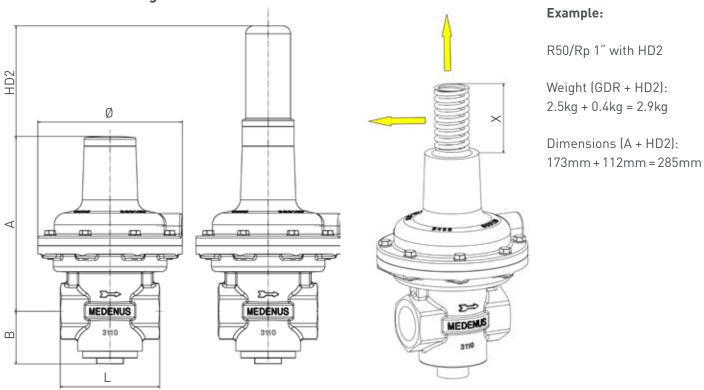

## Types of Models / Options

## Epoxy resin coating in RAL colors

To protect the gas pressure regulator from external influences, starting from a corrosivity category C5-M we recommend an epoxy resin coating.



## Types of models

Oxygen model  $O_2$ 

Hydrogen model H<sub>2</sub> (with helium leak test)

The Medenus gas pressure regulators are suitable for use with hydrogen as a medium up to a proportion of 100%. Further information can be found in the special edition (10/2019) of gwf Gas+Energie and on our homepage at (www.medenus.de)



8

## Design

#### Note

All calculated pressures are absolute pressures. (p+1 bar)

The required KG value for a gas pressure regulator is determined with  $% \left( 1\right) =\left( 1\right) \left( 1$ 

the smallest inlet pressure or lowest pressure drop.

#### Calculation of the required K avalue

$$\begin{array}{c} p_{_{d}} \, / \, p_{_{u}} > 0.5 \\ \text{Value flow rate coefficient } K_{_{G}} \, \text{at} \\ \text{a subcritical pressure ratio} \\ K_{_{G}} = Q_{_{n}} \, / \sqrt{p_{_{d}} \cdot (p_{_{u}} - p_{_{d}})} \end{array}$$

$$p_d/p_u \le 0.5$$
  
Value flow rate coefficient  $K_g$  at a supercritical pressure ratio  $K_g = 2 \cdot Q_g/p_u$ 

#### **Device selection**

#### Note

For spring-loaded devices, a capacity reserve of 10-20% is recommended in order to comply with the accuracies given.

The device is selected on the basis of its  $K_g$  value from the table of flow rate coefficients (page 6)

p<sub>u</sub> Inlet pressure (bar) p<sub>v</sub> Outlet pressure (bar)

Q Standard volumetric flow rate (m³/h)

#### **Example:** Overpressure Absolute pressure

p <sub>u min</sub>	5.0 bar	6.0 bar
P <sub>d min</sub>	0.5 bar	1.5 bar
Q .	200 m <sup>3</sup> /h	

1.5 bar /6 bar = 0.25 < 0.5

→ Supercritical pressure ratio

 $K_c = 2 \cdot 200 / 6 = 67 \text{ m}^3/(\text{h*bar})$ 

#### Selected device

Туре	R50
DN - Nominal width	25
D - Nozzle	V 11

 $K_{\rm g}$  value 175 m<sup>3</sup>/(h\*bar)

#### Checking the gas velocities

$$W = 380 \bullet Q_{p} / (DN^{2} \bullet p_{abs})$$

**Note** The factor 380 refers to an operating gas temperature from approx. 15°C to 20°C. For other temperatures, the velocity must be corrected as follows:  $w_{corr} = w \cdot [t_{qas} + 273.15]/290$ 

Recommended max. gas velocity at the inlet flange:

50 - 70~m/s lower value for redirections upstream of the control valve, 20~m/s for upstream filters

Recommended max. gas velocity at the outlet flange:

100 - 200 m/s lower value to reduce noise emissions

Recommended max. gas velocity on impulse tap: 15 - 25 m/s lower value for outlet pressures below 100 mbar

The device selected in the example of nominal width DN 25 can be operated under these conditions.

Nominal width of input and output of pipeline according to the selected device: 25 mm Selected widening of outlet pipeline: 50 mm

$$W_{II} = 380 \cdot 200 / (25^2 \cdot 6) = 20 \text{m/s}$$

$$W_d = 380 \cdot 200 / (25^2 \cdot 1.5) = 81 \text{ m/s}$$

$$W_{lmpulse} = 380 \cdot 200 / (50^2 \cdot 1.5) = 20 \text{ m/s}$$

#### Note

To obtain a more accurate design configuration of our gas pressure regulators, you can use our configurator, on our homepage medenus.de, under Service. (medenus.de/de/service/konfigurator.html)

## **Properties of Gases**

- for natural gas ( $\rho_n = 0.83 \text{ kg/m}^3$ ;  $t = 15^{\circ}\text{C}$ )
- $\Delta p$  = pressure difference from inlet pressure to outlet pressure
- $Q_n = \text{max. possible volume flow (determined from } K_G \text{ values with a safety margin of } 10\%)$
- f natural gas conversion factor- L

Gas	f	Hs,n	Gas	f	Hs,n
		[kWh/m³]			[kWh/m³]
Acetylene	0.84	16.25	Sewage gas	0.84	
Ammonia	1.04	4.83	Carbon monoxide	0.81	3.51
Butane	0.55	37.23	Carbon dioxide	0.65	-
Chlorine	0.51	-	Air	0.80	-
Landfill gas	approx. 0.80		Methane	1.08	11.06
Natural gas L	1.00	9.77	Propane	0.64	28.03
Natural gas H	1.03	11.45	Oxygen	0.76	-
Ethane	0.78	19.55	Sulphur dioxide	0.53	-
Ethylene	0.97	16.516	Nitrogen	0.81	-
Mine gas	(30% CH4)	0.86	Hydrogen	3.04	13.43
Helium	2.15	-			

Notes	

10

## **Order Data**

Example:	Gas pressure regulator:	R50/Rp1"/160/11/HDS/WAZ/So						
	Order code:	R50	Rp1"	160	11.0	HDS	WAZ	So
Order selection	Designation							
Туре								
R50	R50	R50						
DN - Nominal width	Table p. 9		Rp1"					
RE - Diaphragm assembly	160			160				
D - Nozzle (valve seat diameter)	Table p. 9				11.0			
High-pressure spindle								
without high-pressure spindle	-							
with high-pressure spindle	HDS					HDS		
Acceptance test certificate to EN 10204/3.1								
without acceptance test certificate	-							
with acceptance test certificate	WAZ						WAZ	
Special model - Coating with epoxy resin in RAL colors - Oxygen model	So							So

In every selection group, only one option can be selected in each case.

Notes	

11

#### **Contact**



Management ALEXANDER CHRISTIANI

Phone: +49 (0) 2761 / 82788-18 Mail: a.christiani@medenus.de



Technical Inside Sales Department MINDAUGAS PECKAITIS

Phone: +49 (0) 2761 / 82788-23 Mail: m.peckaitis@medenus.de



Head of Inside Sales Department MANUEL SCHEPP

Phone: +49 (0) 2761 / 82788-20 Mobile phone: +49 (0) 170 / 6355309 Mail: m.schepp@medenus.de



Inside Sales Department SEBASTIAN HUCKESTEIN


Phone: +49 (0) 2761 / 82788-11

Mail: s.huckestein@medenus.de



Inside Sales Department STEFANIE MÜLLER

Phone: +49 (0) 2761 / 82788-13 Mail: s.mueller@medenus.de

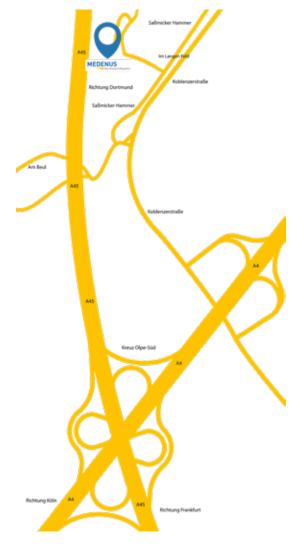

If you want to know more about solutions from MEDENUS for the gas industry, please contact your local contact person or go to our internet site at www.medenus.de

**Trade representation worldwide** medenus.de/de/kontakt.html

## **MEDENUS**

Gas-Druckregeltechnik GmbH

Im Langen Feld 3 D-57462 Olpe

Phone: +49 (0)2761 82788-0
Fax: +49 (0)2761 82788-9
Mail: info@medenus.de
Internet: www.medenus.de



## THE MEDENUS PLUS

# 10 reasons for good business relations

- Consultancy expertise and quality standards developed over decades
- Broad and proven standard range of feedback controllers
- Modern, fast and efficient production for series products and for individual orders
- 4. Customer-specific design of pressure regulators and vacuum regulators and special designs
- Guaranteed deadline compliance with a delivery deadline guarantee
- Fast response time in all matters
- Sufficiently large parts storage for production and spare parts
- Customer-specific theory & practice training courses
- Modular design right across the entire product range to facilitate optimized handling of spare parts
- Made in Germany

Notes	
***************************************	
0.11.2022	

© 11.2023

In the download area of our homepage, this document is available in different languages. You can use the following QR codes and links to go directly to this document in your language.



#### Deutsch:

http://medenus.de/files/upload/downloads/R50/Pi\_R50\_de.pdf



**Notes** 

## English:

http://medenus.de/files/upload/downloads/R50/Pi\_R50\_en.pdf